


# INSTRUCTIONS FOR SLOPING TOP ASSEMBLY

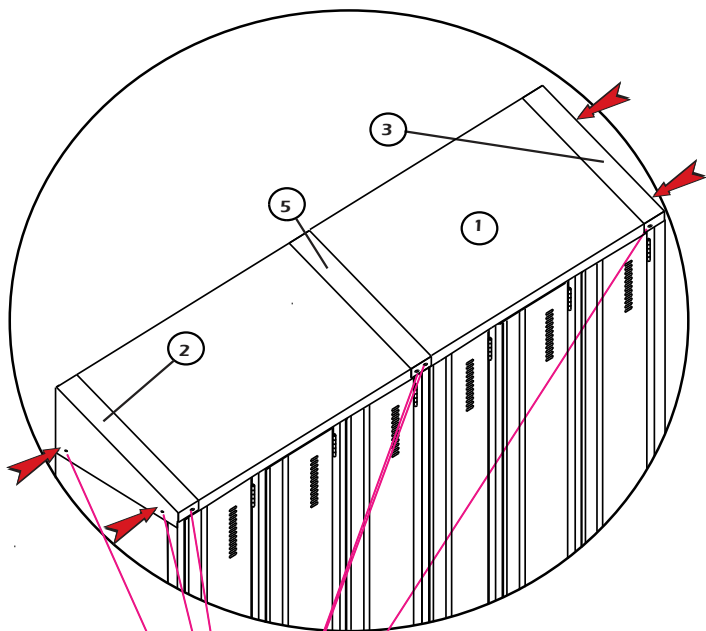

- 1** Slop top.
- 2** Left end cap.
- 3** Right end cap
- 4** Support
- 5** Cover joint

## STEP 1:

IF JOINING TOGETHER 2 UNITS OR MORE, SLIDE EACH SLOPING TOP INTO THE OBTURATOR AND THE COVER-JOINT. A SUPPORT IS NEEDED FOR EACH COVER-JOINT, IT WILL BE PLACED NEAR IT BUT NOT UNDER.

## STEP 2:

THE OBTURATORS WILL BE FIXED WITH 2 RIVETS (1/8") ON THE SIDE AND 1 IN FRONT.

THE COVER-JOINT WILL BE FIXED WITH 2 RIVETS (1/8") IN FRONT.

